

# FRANKE OMNI and OMNI CLASSIC 4-in-1 BOILING WATER SYSTEM

Installation instructions



Omni 4-in-1  
119.0380.520



Omni Classic 4-in-1  
119.0438.426



*Make  
it  
Wonderful*



ONE TAP DOES IT ALL



## Introduction

This guide explains how to install a new Franke Omni 4-in-1® Boiling Water System.

Thank you for purchasing a Franke Omni Tap System. In keeping with Franke's worldwide reputation this product has been designed and manufactured to the very highest quality standards. Correctly installed and properly maintained in accordance with the following instructions, it will provide you with reliable service for many years.

The Franke Omni System comprises 3 separately packaged assemblies:

Franke 4-in-1 Omni tap  
(Omni Original Part Number: 119.0380.520)  
(Omni Classic Part Number: 119.0438.426)


Franke boiler - Model QHT-1 (Part Number: 119.0380.581)

Franke water filter complete with a Franke O8 filter cartridge. (Part Number: 119.0380.582)

The Franke Omni System must be installed using only the genuine Franke items listed below. Substituting any of the above 3 items for non-Franke manufactured alternatives, or failing to install and maintain the unit in strict accordance with these instructions, will invalidate your product warranty. Franke will not accept liability for damage or accidents resulting from the use of non-genuine Franke components, incorrect installation or operation.

## Application

This product is a boiling water device intended for domestic use only. The water supply pressure must be between minimum 1.5 BAR (22 psi) maximum 5 BAR (73 psi)

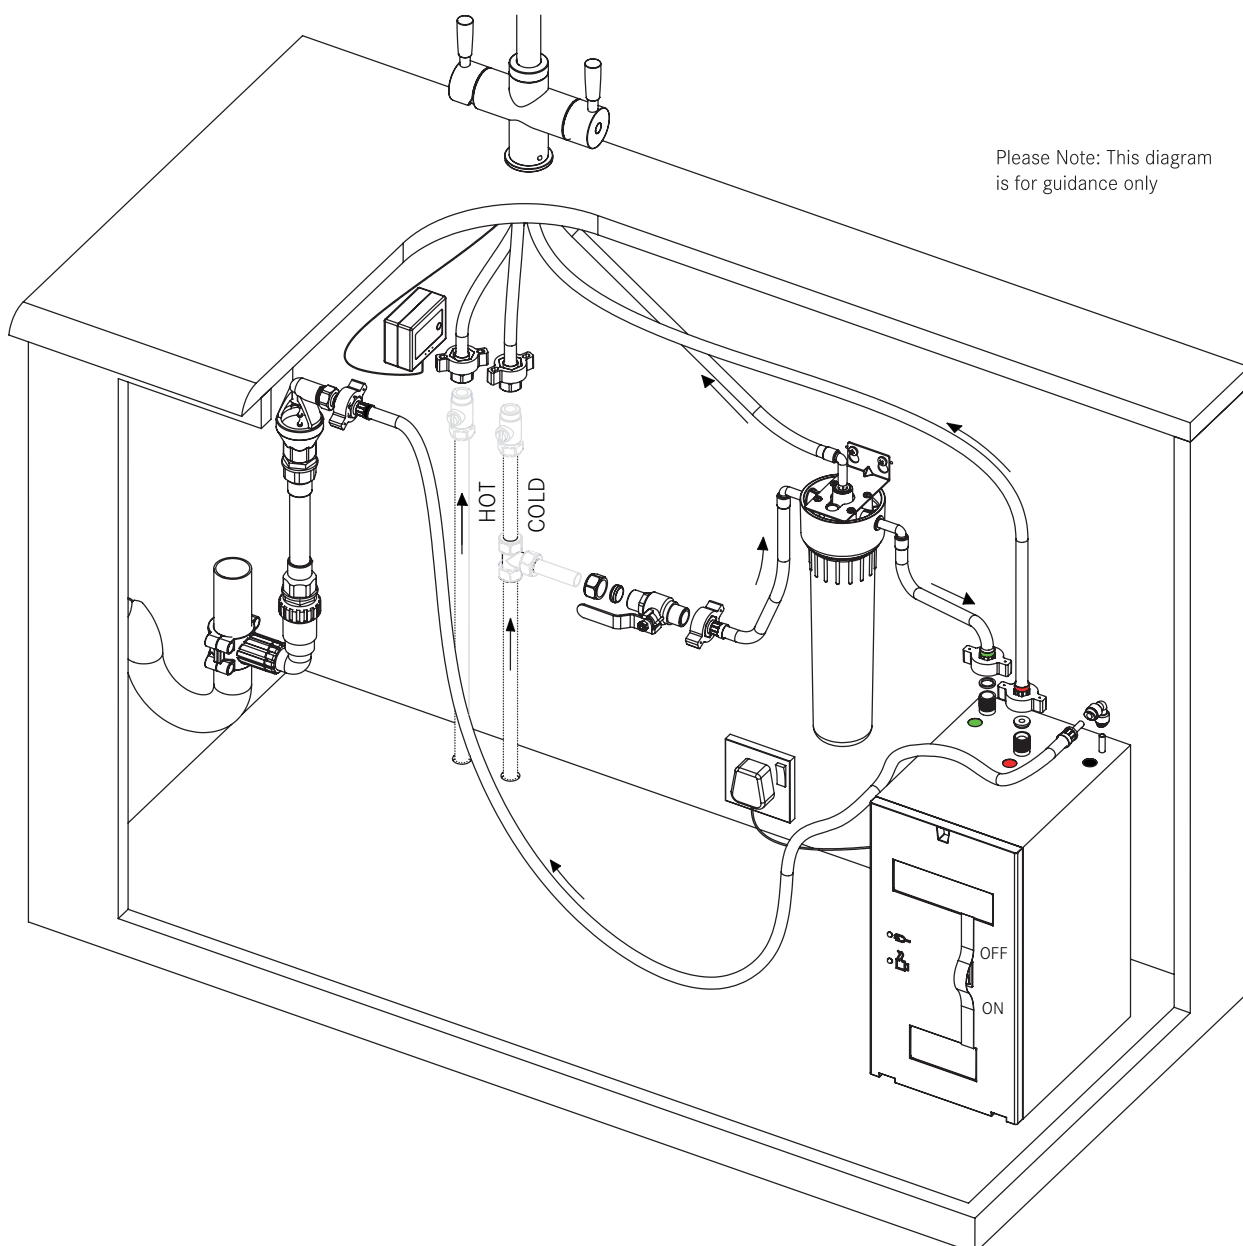

## Safety

Remember: Boiling water is potentially dangerous and great care should be exercised when using the Franke Omni tap.

The installation must be carried out by a suitably qualified professional in strict accordance with the instructions provided and comply with the UK Water Supply (Water Fittings) Regulations 1999 and safety standards.

If a new electrical power supply is required you must seek the services of a qualified electrician.

The boiler must only be connected to the 230V mains electricity supply through either an earthed independent wall socket or a fused spur.

The boiler is fitted with an electrical lead terminating in a UK 3 pin fused plug for connection to the 230 volt 13 amp domestic electricity supply. It is important to use a socket with a built in switch and position it to provide convenient access to switch off the boiler.

Turn off the mains water supply before commencing installation.

Never lift the boiler by the flexible connector hoses.

The power to the boiler must only be switched on once the installation is complete and the tank is full of water.

Always turn off the electricity supply to the boiler before you close the mains stop valve. Restore power to the boiler after the mains stop valve has been opened.

Young people and potentially vulnerable users must be instructed how to operate the boiling water function safely by a responsible adult.

This is a domestic appliance and must not be installed in a commercial environment.

If the supply cord is damaged it must be replaced by the manufacturer, an official service agent or similarly qualified persons in order to avoid a hazard.

## Boiler technical data

Description	Value	Unit
Dimensions	230 x 182 x 354	mm
Load	10	Amps
Voltage	230	Volts
Power	1500	Watts
Stored Temperature	105	°C
Min Water Pressure	1.5	Bar
Max Water Pressure	5	Bar
Heating Up Time	20	Mins
Recovery Time	10	Mins
Boiler Capacity	4	Litres
Pressure Release Valve Rating	8	Bar


## Before you begin

1. Check the mains water pressure. The pressure must not be below 1.5 BAR (22 psi) or above 5 BAR (73 psi), measured during a low demand period – (mid-morning or mid-afternoon). If the pressure exceeds 5 BAR a pressure reducing valve must be installed in the cold mains supply to protect both the boiler and the water filter housing. A suitable pressure reducing valve can be purchased at [www.frankefilterflow.co.uk](http://www.frankefilterflow.co.uk).
2. The unit must be installed in a frost free environment.
3. Ensure that the cabinet is well ventilated. If in doubt it is advisable to improve the circulation of air by drilling some holes in the top and bottom of the rear panel.
4. Be careful when making the various connections to the mains water stop valve and the boiler. Do not be tempted to over-tighten the connections. It is only necessary to firmly hand tighten the nuts using the patented NutRunna® plastic tightening devices provided to make a secure watertight seal.
5. Locate the existing hot and cold water supply pipes.
6. Shut off the mains water supply.
7. Switch off the mains electricity supply at the socket.


## Component list

- Franke Omni 4in1 tap
- Filter Cartridge change indicator module
- Safety clip for boiling water handle
- AA Batteries for filter cartridge change indicator module x2
- Tap clamp
- Tap clamping nut x2
- Box spanner for tap clamp nuts
- Compression washer for underside of tap
- Cable ties x4
- NutRunna® hand-tightening device for G1/4" nuts x2
- NutRunna® hand-tightening device for G1/2" nuts x4
- Franke QHT-1 boiler
- Push-fit elbow
- Tapered silicone washer for boiling water outlet. (red sticker)
- Flat silicone washer for boiler water inlet. (green sticker)
- Vent assembly
- Saddle clamp
- Vent hose
- Vent assembly elbow
- Pipe cutter
- Water filter housing assembly
- Franke 08 water filter cartridge
- Stop valve
- Water filter retaining screws


Supplied in box with tap

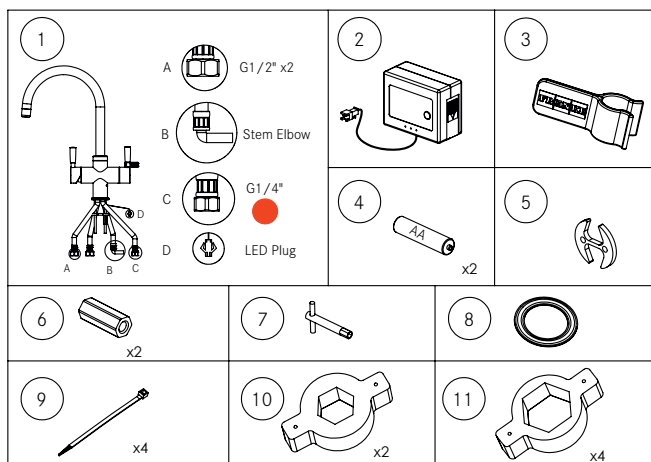

Supplied in box with boiler

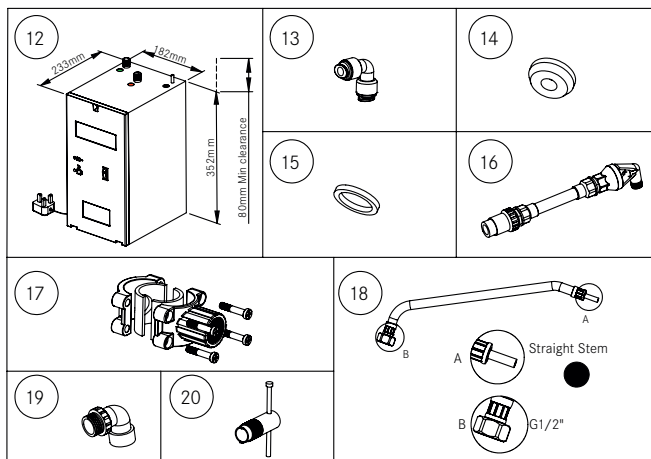

Supplied in box with filter system

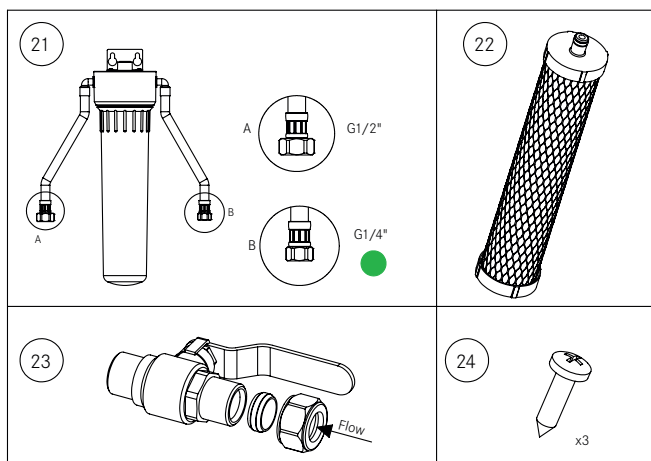

# THE INSTALLATION PROCEDURE

## Install the Franke Omni 4in1 kitchen tap

Carrying out this operation first will make it easier to plan the layout inside the cabinet. For safety, it is advisable to locate the tap at, or towards, the back of the sink out of reach of smaller children.


The tap will require a standard 35mm diameter hole drilled in the kitchen work surface. **Important note:** before drilling the hole make sure that there is enough clearance between the tap handles and the back splash when the handles are in the fully open position.

Insert the flexible hoses and the wire lead through the 35mm hole.


Position the tap for the owners' convenience. (The tap can be rotated 180° for left handed operation of the boiling water function).

Working inside the cabinet, slide the gasket (8) and the clamp plate (5) over the hoses and the two studs at the base of the tap. Screw the two clamp nuts (6) on to the studs using the box spanner (7).


Check the alignment of the tap then tighten the two clamp nuts using the box spanner to firmly secure it on the work surface.

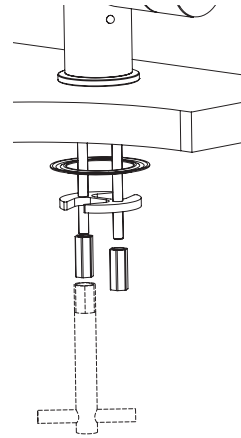

Omni

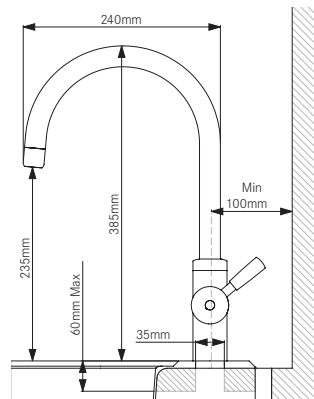

Omni Classic

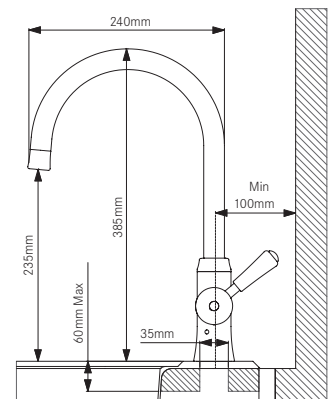

## Plan the layout inside the cabinet

Determine the best positions for the hot and cold mains water supply.

Determine the best positions for the boiler and the filter unit, making sure that the boiler power cable, the flexible hoses, and the filter cartridge change indicator cable, are all within comfortable reach of their respective connection points without them being compressed, stretched or kinked.

The boiler must be installed upright with the hose connections at the top, never on its side.

Allow a minimum clearance of 80mm at the top of the boiler for the connecting hoses.

Choose a location for the filter unit (21) and the stop valve (23) to allow convenient access for future filter cartridge changes.

## The plumbing

Provide a hot and cold water supply for the tap. (We recommend that service stop-valves are fitted in both the hot and cold water supplies to the tap).

Tee off the cold mains water supply to provide an independent feed to the water filter.

Install the stop-valve (23) inline on the independent feed to the filter. **Important note:** the ends of the stop valve are different. One end has an internal chamfer to connect to compression pipework; the opposite end has a flat washer face to suit the G $\frac{1}{2}$ " ( $\frac{1}{2}$ " BSP) nut and washer of a flexible hose (refer to diagram (23) in component list).

Connect the hot and cold G $\frac{1}{2}$ " flexible hoses to the respective hot and cold supplies and tighten them firmly to make a watertight seal – two G $\frac{1}{2}$ " NutRunna® hand tightening devices (11) are supplied loose with the tap for this purpose. The tap hose with the blue indicator should be connected to the cold supply and the hose with the orange indicator to the hot supply.

## Install the filter unit

**Important note:** The filter unit must be installed inside a cupboard. Long term exposure to direct light can degrade the plastic sump leading to eventual failure.

Position the filter unit (21) vertically with the hoses at the top, in its previously determined location.


Mark the positions for the two filter unit support screws (24) using the holes in the filter bracket as a guide.

Set the filter unit aside and screw in the two screws leaving the heads slightly proud (approximately 4mm).

Take the G $\frac{1}{2}$ " nut (21.A) at the free end of the filter inlet hose and screw it on the G $\frac{1}{2}$ " male outlet thread of the stop valve (23). Hand tighten the nut firmly using the attached NutRunna® (11) sufficient to make a watertight seal. Do not overtighten.

Take the grey push fit stem elbow at the free end of the cold filtered water hose attached to the tap, wet the stem before pushing it firmly into the female outlet at the top of the filter. **Important note:** ensure that the stem connector is pushed fully home – 10mm of the stem should enter the female connector.

Hang the filter unit on the two screws. If the panel is too thin to mount the filter securely strengthen the panel with a wooden batten.

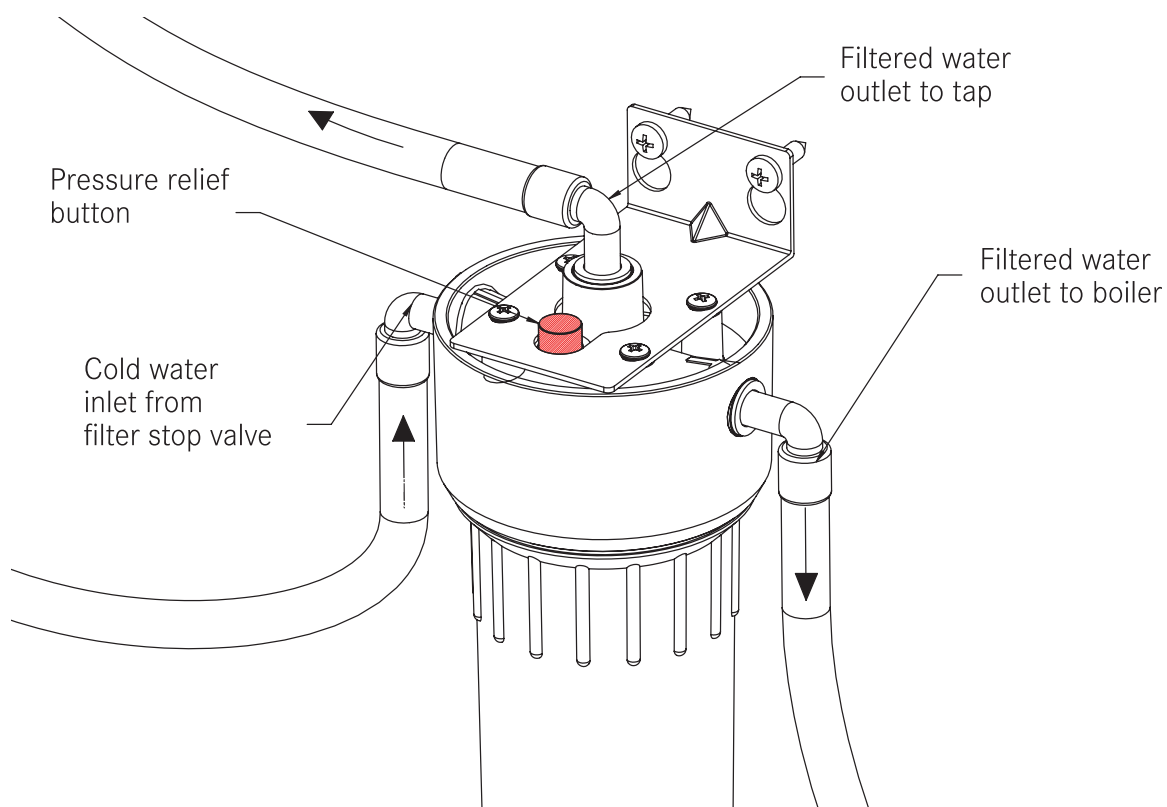

## Install the plastic vent assembly

**Important note:** The vent pipe must be installed vertically with the air-gap at the top. The vent pipe conforms to the building regulations and on no account should be shortened or modified in any way.

Choose a convenient position to fit the saddle clamp (17) preferably on a vertical section (Option 1) of the waste pipe, or alternatively on a horizontal section (Option 2). When installing the saddle clamp horizontally the elbow (19) is not required. Be careful to allow sufficient clearance for the height of the vent assembly and enough room to operate the pipe cutter (20).

Separate the two halves of the saddle clamp by unscrewing and removing the four nuts and bolts. Discard the two black rubber inserts for 41mm waste pipe. Leave them in place for 32mm pipe.


Place the saddle clamp in position on the chosen section of waste pipe and re-assemble the clamp. Tighten the nuts and bolts securely to make a watertight seal.

Insert the pipe cutter (20) into the saddle clamp and cut a hole in the waste pipe by rotating it to the right until it breaks through. (see diagram.)



Screw the vent assembly (16) into the saddle clamp. When the saddle clamp is installed on a vertical section of the waste pipe screw the elbow in first and use the lock nut to secure the air gap assembly in the vertical position.

Take the vent hose (18) (black indicator) and connect the G $\frac{1}{2}$ " nut end onto the corresponding G $\frac{1}{2}$ " male thread at the top of the vent assembly. Use the attached NutRunna<sup>®</sup> (11) to tighten the nut firmly, sufficient to make a water-tight seal. Do not overtighten.

### Option 1

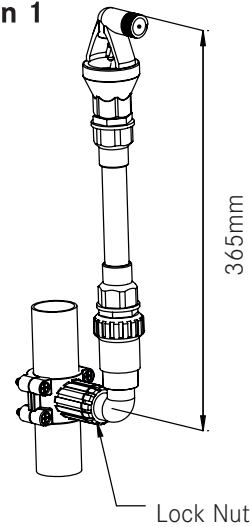

### Option 2

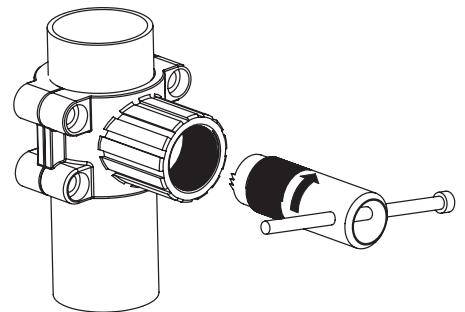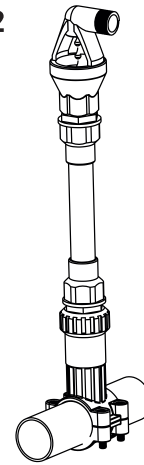

## Install the boiler

**Important note:** Do not plug the boiler into the power supply at this stage.

For ease of installation the boiler connections and the flexible hoses are colour coded:

**Green** - Filtered water

**Red** - Boiling water

**Black** - Vent


Remove the protective caps from the three connections on the top of the boiler.

Place the boiler (12) in position upright on a flat surface inside the cabinet with the connections to the top.

Take the G1/4" female nut (21.B) at the free end of the filter outlet hose (green indicator). Carefully position the flat silicon washer (15) inside the nut. Screw the nut onto the G1/4" male boiler inlet (green dot). Hand tighten using the attached NutRunna® sufficient to make a watertight seal. Do not overtighten.

Take the free end of the boiling water flexible hose attached to the base of the tap (red indicator). Carefully position the tapered silicon washer (14) on the G1/4" male boiler outlet (red dot). Take the spare G1/4" NutRunna® (10) and place over the nut. Screw the nut onto the G1/4" boiling water outlet of the boiler (red dot). Hand tighten the nut firmly, sufficient to make a watertight seal. Do not overtighten.

Use the cable ties (9) to neatly secure the various flexible hoses out of harm's way.

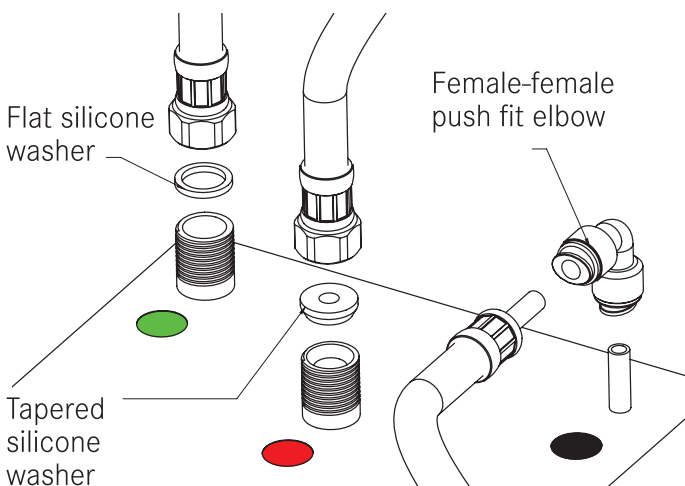

## Install the filter change indicator module

Install the 2x AA batteries (4) in the module (2). A "bleep" will confirm that they are correctly installed.

Choose a convenient location for the module, on the side of the cabinet or the boiler, making sure that the attached power cable is within easy reach of the mating cable attached to the base of the tap.


Secure the module in place using the self-adhesive Velcro pad provided.

Plug the two cables together.

The LED indicator:

**Red** - Indicates that the water filter cartridge needs replacing.

**Yellow** - Indicates that the two AA batteries in the module need replacing.

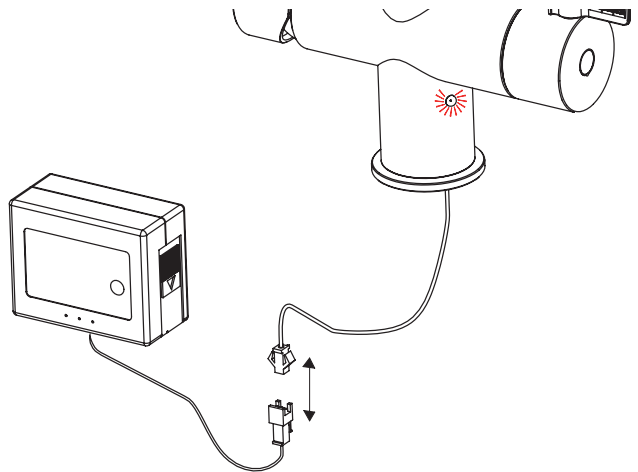



## Commissioning the system

Install the filter cartridge into the filter housing. (Refer to the separate Cartridge Change Instructions in the filter system box).

Turn on the water supply.

Operate the boiling water function for 3 minutes to flush the system. (Please see the OPERATING THE OMNI TAP overleaf.)

Turn the tap off and check the connections for leaks.

Plug the boiler into the mains electricity supply socket.



Remove the warning strip covering the "ON-OFF" switch on the front of the boiler and turn the switch to the "ON" position. Check the top LED (Plug logo) on the boiler turns green to indicate power is on. The lower LED (Mug logo) will turn red to indicate the boiler is heating up.

Wait for 10 minutes and then check that water is discharging from the vent pipe. **Important note:** If water does not start to discharge from the vent pipe into the cup after 10 minutes, switch off the power, operate the boiling water function on the tap to release the pressure, and refer to the Troubleshooting Guide overleaf.

Allow approximately 20 minutes for the boiler to reach full operating temperature, indicated by the lower LED turning green.

Operate the tap boiling water function for a minute to exhaust trapped air from the system.

The system is now ready for use. Please demonstrate to the homeowner the procedure for replacing the water filter cartridge and explain the importance of scheduled cartridge changes to maintain the quality of the filtered drinking water and the boiler warranty.

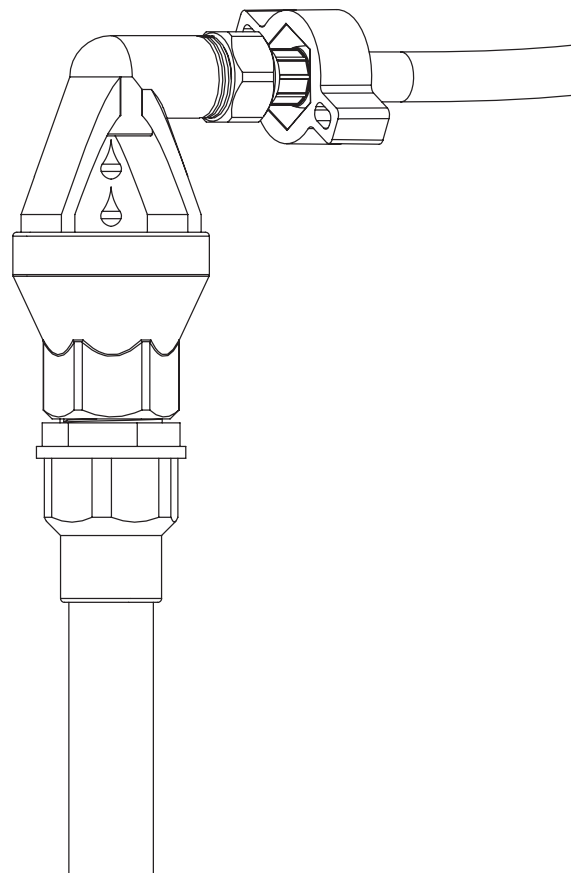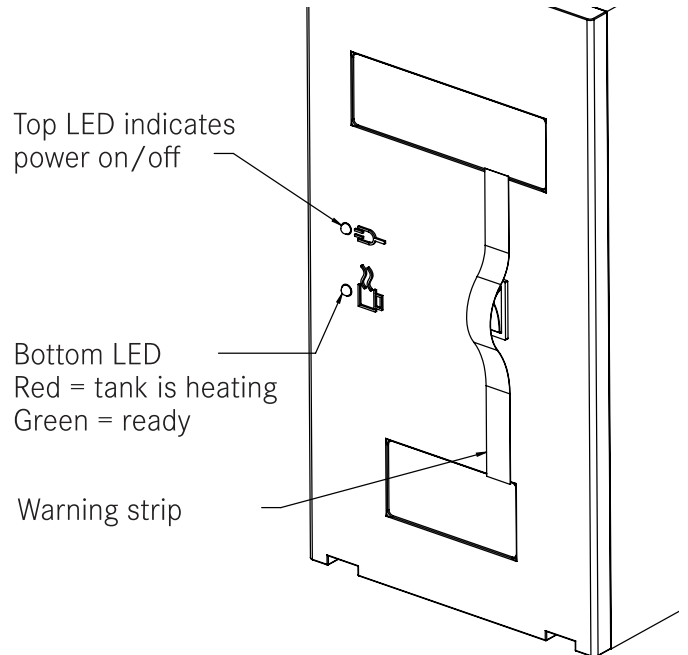

## Operating the Omni tap

The body of the tap is clearly marked to show the 4 functions.

### Normal unfiltered mains hot and cold water.

The hot and cold water is controlled in the normal manner by the lever opposite the boiling/cold filtered water lever.

### Boiling Filtered water

Remove the red safety clip (3)

Depress the boiling water lever to release the safety lock and rotate it against the spring pressure.




Guide the boiling water lever back to the "OFF" position. Note: Do not just release the handle or it will pass through the "off" position and turn on the cold filtered water.

The correct way to dispense the boiling water is to contain the end of the spout inside the vessel you are filling; gradually lowering the container as it fills.

### Cold filtered water

The cold filtered water function is controlled by turning the boiling filtered water lever in the opposite direction, but without the need to depress the lever to disconnect the safety lock beforehand.

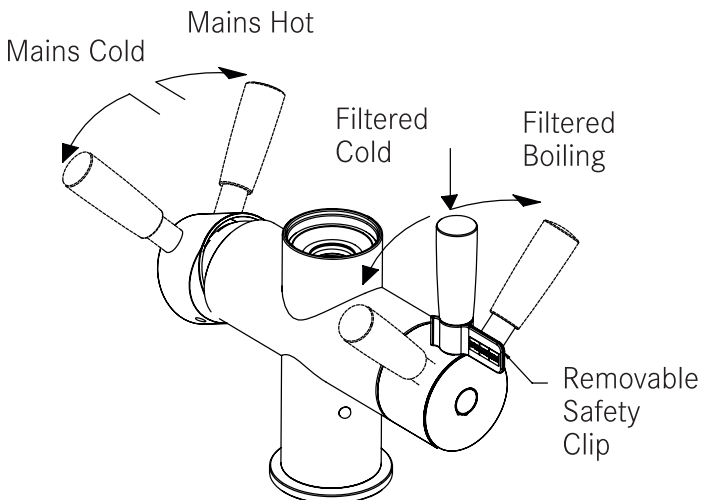

## Care and maintenance

### Cleaning the Omni tap

The Omni tap is manufactured in stainless steel and is therefore extremely durable and stain resistant. All that is required to keep it in good condition is a regular wipe over with a damp cloth - Franke offer a micro-fibre cloth for this purpose that can be purchased on line at [www.frankefilterflow.co.uk](http://www.frankefilterflow.co.uk)— and an occasional wash with a proprietary moisturising hand cleaner or the application of a small amount of baby oil on a soft cloth or tissue will also help to keep the finish bright and free of smears.

### Changing the batteries in the filter cartridge change module

If necessary separate the module from the Velcro pad and slide off the battery cover at the side of the module. Remove the battery carrier and replace the two old AA batteries with two new ones. Press the reset button.

### Removing the boiler

Disconnect the electricity supply to the boiler.

Operate the boiling water function and run the boiling water until the water flowing from the spout runs cold.

Shut off the water supply to the boiler.

Operate the boiling water for a second time until the water stops flowing to release the pressure in the boiler.

Disconnect the hoses from the boiler using a suitable container to catch residual water.

Remove the boiler carefully, unscrew the brass drain nut at the base and pour out the water it contains.

## Water filter maintenance

The water filter supplied with this unit is designed to both protect the boiler and provide high quality drinking water free of sediment, chlorine and other potentially harmful contaminants.

Changing the filter cartridge every 6 months will keep the boiler in good condition and maintain the quality of the filtered drinking water. Franke will not accept responsibility for boiler failures due to the build-up of limescale if the filter cartridge has not been replaced at the recommended 6 month intervals.

The occasional wash in warm soapy water is sufficient to keep the plastic housing clean. Under no circumstances should the plastic filter housing come into contact with any proprietary cleaners such as kitchen sprays, bleach etc. as contact with certain chemicals can degrade the plastic and cause it to fail.

The plastic housing must be replaced every 10 years due to the tendency of plastic materials to degrade and weaken over time.

A smear of WRAS approved silicon grease applied to the filter sump thread and to the rubber sealing ring in the head of the filter at each cartridge change will make it easier to unscrew the sump. **Important Note:** Only a WRAS approved silicone grease must be used for this purpose. Non-approved greases may degrade both the seals and the plastic housing and lead to eventual failure. Small tubes of WRAS approved silicone grease are available online at [www.frankefilterflow.co.uk](http://www.frankefilterflow.co.uk) or over the phone on 01603 875 468.

The standard replacement filter cartridge for the Franke Omni system is the Franke 08. The Franke 08 will remove sediment, chlorine and other chemicals as well as prevent limescale from damaging the boiler. It should be replaced every 6 months. Other filters are available for specialist applications, for more information visit [www.frankefilterflow.co.uk](http://www.frankefilterflow.co.uk)

## Changing the filter cartridge

Operate the switch on the front of the boiler to switch off the boiler power supply.

Shut off the water supply to the filter using the adjacent stop-valve.

Press the red button at the top of the filter unit to exhaust the pressure in the system. It will not be possible to unscrew the filter canister if this operation is not carried out.

Place a shallow container in the cabinet to catch any water residues when removing the filter sump. Grip the sump firmly and turn it firmly to the left to break the seal. Unscrew the sump by hand until it separates from the head of the filter.

If the old cartridge does not automatically fall free press down on the top mount of the cartridge to release it. Remove the old cartridge and discard the remaining water in the sump.

Remove the new filter cartridge from its packaging, wet the "O" seal and place it in the filter sump. Position the sump, with the cartridge inside, under the filter head and screw it in place. The cartridge should engage automatically. Tighten the sump, sufficient to make a water tight seal.

Turn the water supply 'on' and check the system carefully for leaks.

Operate the system and run the filtered water for a few moments until the water runs clear. Run the boiling water for a moment to release any trapped air.

Turn the boiler power supply back on.

Press the reset button on the filter change indicator module installed underneath the sink to reset the timer.

## Frequently asked questions and troubleshooting guide


### The boiling water flow is agitated and noisy

Please bear in mind that your Franke Omni system is dispensing boiling water, rather than very hot water, and as a consequence there will be the normal steam, agitation and noise associated with boiling water. Initially this may be alarming, but read through the technique suggested below and practice it a few times. Dispensing boiling water will quickly become second nature.

### We recommend that you dispense boiling water as follows:

1. Discharge a small amount of water until steam appears.
2. Turn off the boiling water.
3. Position the vessel over the outlet of the tap spout.
4. Begin to dispense boiling water by maintaining pressure on the handle.
5. Gradually lower the vessel while keeping the spout just above the surface of the water.
6. Turn off the boiling water and withdraw the vessel.

Please take a moment to visit [www.franke.co.uk](http://www.franke.co.uk) for a short video demonstration of an Omni in use to accompany the above instructions.

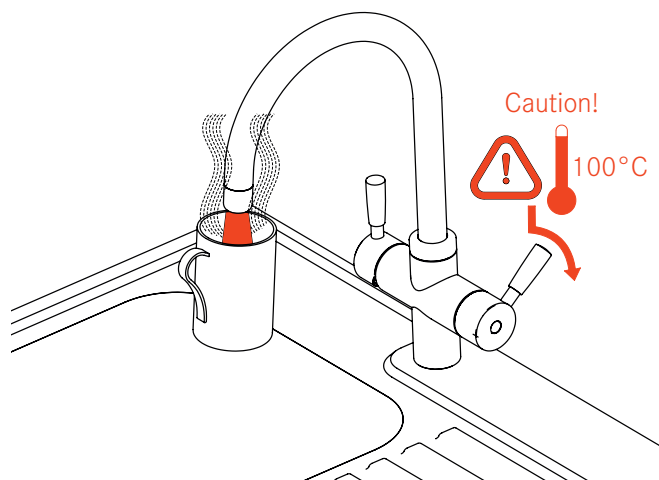

### The flow of boiling water splutters more than shown in the video

Check that the stop valve is fully open and for kinks in the flexible hoses; particularly the boiling water hose.

If this does not resolve the issue, check the water pressure using a gauge rather than estimating to ensure a reliable reading. As previously stated it should fall between 1.5 bar (22 psi) 5 bar (73psi).

If the problem persists, remove the filter cartridge and try running the system without the cartridge installed to determine whether the cartridge is blocked and restricting the flow.

### Water fails to discharge from the vent tube after power has been switched on to the boiler for 10 minutes

Check there is power to the boiler. The 'Plug' LED should be green. Check there are no kinks in the vent hose.

### Water is continually dripping/running into the vent assembly

Water continuously discharging from the vent indicates that the water pressure is too high; above the 5 bar (73 psi) stipulated maximum. In normal operation the pressure relief valve will allow water to drip for approximately 20 minutes after the boiler is switched on. Thereafter it will drip periodically; after water is drawn off and as the boiler comes back up to temperature.

Check the water pressure at a low demand period (mid morning or mid afternoon). If it exceeds 5 bar (73 psi) it will be necessary to install a 3-4 bar pressure reducing valve. A suitable valve can be purchased at [www.frankefilterflow.co.uk](http://www.frankefilterflow.co.uk) or from a plumber's merchant.

While waiting for the pressure reducing valve to be fitted turn off the boiler.

### The boiling water function is dispensing cold water instead of boiling water

- Check that the electrical supply is correctly connected and there is power to the tank.
- Reset the thermal cut-out using the following procedure:
  1. Operate the switch on the front of the boiler to the 'OFF' position.
  2. Turn off the electricity supply to the boiler at the mains socket.
  3. Expose the base of the boiler taking care not to damage the connections on the top of the tank.

4. There is a silver label on the base of the tank indicating the location of the reset hole.
  5. Insert a small screw driver into the hole, press it in firmly and hold for 3 seconds.
  6. Place the tank back in position.
  7. Turn on the electricity supply at the mains socket.
  8. Operate the switch on the front of the boiler to the 'ON' position.
  9. Allow 15 minutes for the water to come back up to temperature before operating the boiling water function.
- If you are still experiencing problems please contact Franke FilterFlow on 01603 845 468.

#### **The vent assembly is overflowing**

Check that the has been hole has been properly cut in the waste pipe.

#### **The hot water flow from the tap is slow (not the boiling water)**

Check the hot water pressure. A minimum of 1.5 bar pressure is required.

#### **The filtered cold and boiling water flow from the tap is slow**

Generally this indicates that the filter cartridge is clogged with contaminants and needs replacing. You can check by operating the filtered water with no cartridge in the filter housing.

#### **The flow of filtered water has slowed to an unacceptable level inside the 6 months change period**

The period between cartridge replacements is not guaranteed; it is an estimate based on filtering mains water of average quality. Please bear in mind that water quality varies from locality to locality and situation to situation. In areas with higher than average turbidity (particle contamination) more frequent cartridge changes may be necessary.

#### **Unightly deposits on the surface of a cup of tea**

In hard water areas a 'scum' can appear on the surface of hot tea. Although unsightly it is completely harmless. The cause is related to the precipitation of calcium and magnesium in hard water regions and a reaction with the tea bag material. Changing tea bags will often remedy the problem. Alternatively you can consider switching to a Franke O6 cartridge which will remove the calcium and magnesium however please note this filter will need to be change more frequently, perhaps every 2- 3 months. The life of the Franke O6 is dependent on the hardness of the water supply and the volume of water passed through it, so is impossible to predict, however the return of the 'scum' on hot drinks is an indication it should be replaced.

#### **Foam is forming on the surface of hot drinks**

This is caused by a combination of the agitation of the boiling water creating millions of tiny air bubbles and the amount of oil in the teabag material. To reduce the problem try filling the teapot or cup with boiling water and allowing the water to settle before dropping the tea bag in rather than running the boiling water directly onto the teabag, or perhaps experiment with different brands of tea bag.

#### **Milky or cloudy appearance of the filtered water**

A new filter cartridge has a significant amount of air trapped in the microporous structure of the cartridge. This will form tiny bubbles and give the water in the glass a milky appearance that will soon disperse when left to stand for a few moments. This may continue for 2 to 3 weeks until the cartridge is fully conditioned.

#### **Tiny black specks in the water**

Tiny black specks may appear initially in the water. These are harmless particles of carbon; residues from the manufacturing process. Allow the filtered water to continue flowing for a while until they are completely flushed through.

#### **Condensation is dripping from exposed copper pipes adjacent to the boiler**

This can be reduced by wrapping insulation around the pipes in question.

## Guarantee

This Franke product carries a 3 year warranty against material and manufacturing defects. The warranty will be valid from the date of purchase as shown on the sales invoice. Please keep the invoice for your records. This appliance is intended for domestic use only. The warranty does not apply to products installed outside a domestic environment.

## Warranty

### What is covered by the Franke guarantee?

The repair or replacement of all or part of your system if your system is found to be defective due to faulty materials or manufacture within 3 years of purchase at Franke's discretion.

If any part is no longer available, or out of manufacture, Franke reserve the right to replace it with a suitable alternative.

### Terms and conditions of the Franke 3 year guarantee

The guarantee is valid for the UK and Republic of Ireland.

The guarantee becomes effective at the date of purchase or at the date of delivery if this is later. Proof of purchase is required under the terms of the guarantee.

The guarantee provides benefits in addition to your statutory consumer rights.

### Franke does not guarantee the repair or replacement of a product that has failed for any of the following reasons:

Faulty installation, repairs or alterations not in accordance with the installation guide.

Normal wear and tear.

Accidental damage or faults caused by negligent use or care; misuse; neglect; careless operation and failure to use the system in accordance with the Omni operating guidelines.

Failure to maintain the water filter in accordance with the instructions.

The use of anything other than genuine Franke replacement parts, including the water filter cartridge. The use of the filter system for anything other than normal domestic household purposes.

Failures of, or failures caused by, parts not supplied with the Omni system.

### How do I make a claim under my Franke 3 year guarantee?

If you are in doubt about what is covered by your guarantee, or wish to discuss a claim, please call Franke FilterFlow on 01603 875 468 Monday to Friday between the hours of 9.00am and 5.00pm.

If you are calling for the first time please have your receipt to hand so that we can record your date of purchase.

Franke FilterFlow is the exclusively appointed after sales agent and water filter supplier for the Franke Omni 4in1 Boiling Water System.

The company reserves the right to alter, change or modify product specifications without prior notice.

## Declaration of conformity



The Omni boiler complies in accordance with the following directives:

2006/95/EC Low Voltage Directive

2011/65/EU RoHS Directive

2009/125/EC Eco Design Directive

Protection Level: IP20



The Omni boiler conforms to the requirements of the relevant EU guidelines.

The symbol on the product or on its packaging indicates that this product may not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment.

By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product.

For more detailed information about recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.

The Franke Omni 4in1 system is a product designed in partnership with Greg Rowe Ltd, England, and is protected by the following patent applications GB1515295.2, GB1515293.7, EP15182884.5, US14/837,640, and in China.

NutRunna® is a registered trademark.  
© Greg Rowe Ltd. All Rights Reserved



**Franke UK Limited**

West Park, MIOC  
Styal Road,  
Manchester  
M22 5WB

Phone: +44 (0)161 436 6280  
Fax: +44 (0) 161 436 2180  
Email: [info.uk@franke.com](mailto:info.uk@franke.com)

[www.franke.co.uk](http://www.franke.co.uk)

**After Sales Service**

Franke FilterFlow  
Old Winery Business Park  
Chapel Street  
Cawston, Norfolk  
NR10 4FE

Phone: +44 (0)1603 875 468  
Email: [info@frankefilterflow.com](mailto:info@frankefilterflow.com)

[www.frankefilterflow.co.uk](http://www.frankefilterflow.co.uk)